

ALPHABETICAL REFERENCE GUIDE

BEARING CONE, WHEEL HUB	M348-509-01	1-04
BEARING CUP, WHEEL HUB	M348-508-01	1-04
CAP, SPINDLE	M348-205-02	1-04
CAP, WHEEL HUB	M348-204-02	1-04
COVER, BULKHEAD	M363-217-01	1-15
COVER, FLOW DIVIDER	M363-217-02	1-15
CYLINDER, LIFT	M363-509-10	1-07, 1-08
CYLINDER, TELESCOPIC, PUSHER	M363-503-02	1-05, 1-06
FLOOR, WELDMENT, SHEILD HAULER	M363-201-02	1-03
FRAME, WELDMENT, SHEILD HAULER	M363-200-02	1-02
HOSE TROUGH, LEFT	M363-217-04	1-15
HOSE TROUGH, LEFT	M363-217-06	1-15
HOSE TROUGH, REAR	M363-217-07	1-15
HOSE TROUGH, RIGHT	M363-217-03	1-15
HOSE TROUGH, RIGHT	M363-217-05	1-15
HYDRAULIC DIAGRAM		1-14
HYDRAULIC HOSE COVERS		1-15
KING PIN	M363-512-01	1-02
LANDING GEAR	M363-514-01	1-02
LIFT CYLINDER ASSEMBLY		1-07
LIFT CYLINDER FAIL, CHAIN ASSEMBLY		1-09
O-RING, CAP, WHEEL HUB	M348-512-01	1-04
PIN, BASE END, LIFT CYL, ASSEMBLY	M363-205-01	1-10
PIN, BASE END, LIFT CYL, INSTALLATION	M363-205-01	1-07
PIN, BASE END, PUSH CYL INSTALLATION	M363-205-03	1-05
PIN, BASE END, PUSH CYL, ASSEMBLY	M363-205-03	1-11
PIN, ROD END, LIFT CYL, ASSEMBLY	M363-206-02	1-13
PIN, ROD END, LIFT CYL, INSTALLATION	M363-206-02	1-07
PIN, ROD END, PUSH CYL, ASSEMBLY	M363-206-01	1-12
PIN, ROD END, PUSH CYL, INSTALLATION	M363-206-01	1-05
PUSHER ASSEMBLY		1-05
PUSHER, SHEILD	M363-203-03	1-05
ROD, HINGE	M363-211-02	1-03
SEAL, GREASE, WHEEL HUB	M348-513-01	1-04
SHIMS, .005	M348-541-01	1-04
SHIMS, .010	M348-542-01	1-04
SHIMS, .020	M348-543-01	1-04
SHIMS, .040	M348-544-01	1-04
SPINDLE & HUB ASSEMBLY		1-04
SPINDLE, WHEEL	M348-205-01	1-04
TIRE & WHEEL ASSEMBLY	M348-526-01	1-04
VALVE, AIR	M30-615-01	1-16

VALVE, FLOW DIVIDER, CONCENTRIC	M363-513-01	1-17
WHEEL HUB	M348-204-01	1-04
WINCH INSTALLATION		1-18
WINCH ROPE	M363-505-02	1-18
WINCH, 65K	M363-505-01	1-18
WINCH, PARTS & OPERATORS MANUAL		1-19