

ALPHABETICAL REFERENCE GUIDE

| | | |
|---|---------------|------|
| Adapter, Fan Hub | M250-733-01 | 2-01 |
| Air Compressor Inlet Tube | M250-206-03 | 2-04 |
| Air Horn | M350-571-01 | 5-01 |
| Air Start Circuit Diagram | M350-005-02 | 5-01 |
| Air Tank | M350-514-01 | 5-01 |
| Alternator, Explosion Proof | M500-521-01 | 6-01 |
| Alternator, Explosion Proof, Installation | M250-107-01 | 6-02 |
| Belt, Sepentine | M250-590-01 | 2-01 |
| Belt, V Style | M250-252-01 | 2-01 |
| Bottle, Coolant Recovery | M250-717-01 | 2-01 |
| Cab & Dash Controls | | 7-01 |
| Catalyst, Water Cooled | M90-218-02 | 2-01 |
| Cooling System | M332-011-01 | 2-09 |
| Cover Structure Brackets | M384-201-01CS | 4-01 |
| Covers, Frame | M384-201-01C | 4-02 |
| Cylinder Head, Replacement | M329-106-01 | 2-01 |
| Cylinder, Reworked | M150-570-02 | 2-01 |
| Cylinder, Shutdown | M250-502-01 | 2-01 |
| Electrical Installation | M261-045-01 | 6-05 |
| Electrical Schematic | M261-047-01 | 6-06 |
| Engine Fuel System | | 2-06 |
| Engine, 8.3 Cummins, Parts Catalog | M500-252-21 | 2-11 |
| Exhaust Filter Housing | M281-430-03 | 2-03 |
| Exhaust Manifold | M250-215-18 | 2-01 |
| Fan, 32" Pusher | M201-715-30 | 2-01 |
| Filter / Seperator, Air | M250-513-01 | 5-05 |
| Filter and Regulator Assembly, Air | M201-579-01 | 5-03 |
| Filter, Fuel, Primary | M250-575-01 | 2-06 |
| Filter, Fuel, Secondary | M250-576-01 | 2-06 |
| Flame Arrestor Adapter Pipe | M250-271-02 | 2-04 |
| Flame Proof Port | M40-596-01 | 2-01 |
| Flames Arrestor, Intake | M250-282-21 | 2-01 |
| Fuel Shutoff Assembly | M250-106-01 | 2-05 |
| Fuel Strainer | M250-577-01 | 2-06 |
| Fuel Tank Assembly | M350-204-01 | 2-06 |
| Gas Sampling Kit, CO | M59-301-01 | 2-10 |
| Gauge, Brake Pressure | M510-545-01 | 7-01 |
| Gauge, Coolant Temp | M30-542-30 | 7-01 |

| | | |
|--------------------------------|--------------|------|
| Gauge, Dif-Loc Pressure | M510-545-01 | 7-01 |
| Gauge, Exhaust Backpressure | M30-543-01 | 7-01 |
| Gauge, Exhaust Temp | M30-541-03 | 7-01 |
| Gauge, Intake Vacuum | M250-582-01 | 7-01 |
| Gauge, Safety System Pressure | M350-886-01 | 7-01 |
| Gauge, Tachometer | M502-586-01 | 7-01 |
| Guard, Headlight | M350-264-02 | 4-03 |
| Headlight Assembly | M261-534-01 | 6-03 |
| Heat Exchanger Assembly | M332-301-01 | 2-02 |
| Hydraulic Throttle Pedal | M365-581-01 | 7-02 |
| Hydraulic Throttle System | M350-016-01 | 7-02 |
| Intake Adapter Pipe | M250-272-01 | 2-04 |
| Intake Assembly | | 2-07 |
| Knob, E-Stop Red Replacement | M30-547-23 | 7-01 |
| Knob, Run/Stop Replacement | M30-547-21 | 7-01 |
| Lifting Bracket | M250-211-01 | 2-01 |
| Light Switch Box | M261-512-01 | 6-04 |
| Lubricator | M250-512-01 | 5-05 |
| Muffler, Air Starter | M507-682-01 | 2-01 |
| Pipe, Intake Adapter | M250-272-01 | 2-01 |
| Radiator Assembly | M208-705-02C | 2-01 |
| Safety Shutdown Assembly | M250-555-11 | 5-02 |
| Safety Shutdown Diagram | M250-019-02 | 5-02 |
| Shutoff Valve Installation | | 2-04 |
| Shutoff Valve Kit | M250-120-02 | 2-04 |
| Starter, Air | M250-510-01 | 2-01 |
| Strainer, Fuel | M250-577-01 | 2-01 |
| Support, Intake Flame Arrestor | M250-201-01 | 2-01 |
| Support, Turbo | M250-202-01 | 2-01 |
| Tank, Surge | M38-710-02 | 2-01 |
| Thermostat | M504-517-01 | 2-01 |
| Torque Converter | M350-500-01 | 3-02 |
| Transmission Oil Cooler | M250-727-01 | 3-01 |
| Tube, Fuel Drain | M507-592-03 | 2-06 |
| Turbo Assembly | M329-108-01 | 2-01 |
| Valve, Air Horn | M350-589-01 | 5-01 |
| Valve, Air Shutoff | M250-544-01 | 2-04 |
| Valve, E-Stop | M30-547-01 | 7-01 |
| Valve, Override | M30-558-01 | 7-01 |
| Valve, Run/Stop | M30-547-01 | 7-01 |
| Valve, Start | M30-558-01 | 7-01 |
| Valve, Starter Relay | M250-511-01 | 5-04 |
| Valve, Water Injection | M30-558-01 | 7-01 |

