

ALPHABETICAL REFERENCE GUIDE

Adapter, 90, S/W Tachometer	M350-640-01	5-01
Air Cleaner, Vertical Mount	M250-603-01	2-02
Alternator Installation	M250-107-01	4-04
Alternator, Explosion Proof	M500-521-01	4-03
Bottle, Coolant Recovery, 3.5 Gal	M250-717-01	2-02
Cable, Tachometer Assembly	M250-599-01	5-01
CO Monitoring Ports	M250-006-11	2-11
Connection Box	M261-513-01	4-07
Cooling System	M255-008-01	2-10
Cylinder Head Replacement	M329-106-01	2-01 #1
Cylinder Reworked	M150-570-02	2-01 #3
Cylinder Shutdown	M250-502-01	2-01 #3
Dash Components		5-01
Electrical Installation	M261-021-01	4-01
Electrical Permissibility Checklist	M261-008-01	6-02
Electrical Schematic	M261-003-01	4-02
Engine Parts Catalog	M500-264-11	2-12
Engine Permissibility Checklist	M255-001-01	6-01
Exhaust Filter Housing	M310-411-01	2-07
Exhaust Manifold	M250-215-18	2-01 #1
Fan, Pusher	M201-715-30	2-02
Filter/Regulator Assembly	M201-579-01	3-02
Filter/Seperator	M250-513-01	3-04
Flame Arrestor	M90-501-11	2-04
Flame Arrestor, Intake	M250-282-21	2-01 #2
Flame Proof Port	M40-596-01	2-01 #2
Fuel Shutoff Assembly	M250-106-01	2-06
Gauge, Coolant Temperature	M30-542-02	5-01
Gauge, Exhaust Backpressure	M30-543-01	5-01
Gauge, Exhaust Temperature	M30-541-02	5-01
Gauge, Intake Vacuum	M250-582-01	5-01
Gauge, Main Air Pressure	M350-886-01	5-01
Gauge, Oil Pressure	M350-885-01	5-01
Gauge, Safety Shurdown Pressure	M350-886-01	5-01
Head Lamp Assembly	M261-534-01	4-05
Heat Exchanger	M380-301-11	2-04
Kit, Gas Sampling	M59-301-01	5-01
Light Switch	M261-505-01	4-06

Lubricator	M250-512-01	3-04
Mounting, Bracket 8.3 Slave Cylinder	M150-570-05	2-01 #3
Muffler, Air Starter	M507-682-01	2-02
Pipe, Flame Arrestor	M250-271-02	2-01 #2
Pipe, Intake Adapter	M250-272-01	2-01 #2
Radiator Assembly	M287-705-01C	2-02
Replacement Knob, E-Stop Red	M30-547-23	5-01
Replacement Knob, Run/Stop	M30-547-21	5-01
Safety Shutdown Assembly	M250-555-11	3-01
Safety Shutdown System	M250-019-02	3-01
Serpentine Belt	M250-590-01	2-01 #1
Shut-off Valve Installation	M250-120-01	2-08
Starter Relay Valve	M250-511-01	3-03
Starter, Air	M250-510-01	2-02
Strainer, Fuel	M250-577-01	2-01 #3
Strobe Light	M261-525-01	4-08
Support, Intake Flame Arrestor	M250-201-01	2-01 #3
Surge Tank	M38-710-02	2-02
Tachometer	M502-586-01	5-01
Thermostat	M504-514-01	2-01 #1
Turbo Outlet Adaptor	M250-225-01	2-03
Turbocharger	M250-293-01	2-01 #1
Valve, Air Shutoff	M250-544-01	2-08
Valve, Coolant Temperature	M30-552-01	5-01
Valve, E-Stop	M30-547-01	5-01
Valve, Override	M30-558-01	5-01
Valve, Run/Stop	M30-547-01	5-01
Valve, Start	M30-558-01	5-01
Valve, Water Injection	M30-558-01	5-01
V-Belt	M250-252-01	2-01 #1
Water Cooled Bellows	M250-205-01	2-04
Water Injection Pump	M64-610-01	2-09
Water Injection System	M380-002-01	2-09